2023

Gainscha MAC Driver Installation and Setup Guide

DRIVER V1.0.0

MANUAL V1.0

Table of Contents

Table of Contents 1

Check Mac Using Intel or Apple Silicon 2

Install Driver under Mac OS 4

Install Driver via CUPS (Web Interface) 11


How to Define Default Printer Settings 15

- Setup printer settings 15
- Save and delete printer settings. 19

Gainscha
Reliable and Innovative

Check Mac Using Intel or Apple Silicon

1. Click the Apple icon from the top-left corner/About This Mac

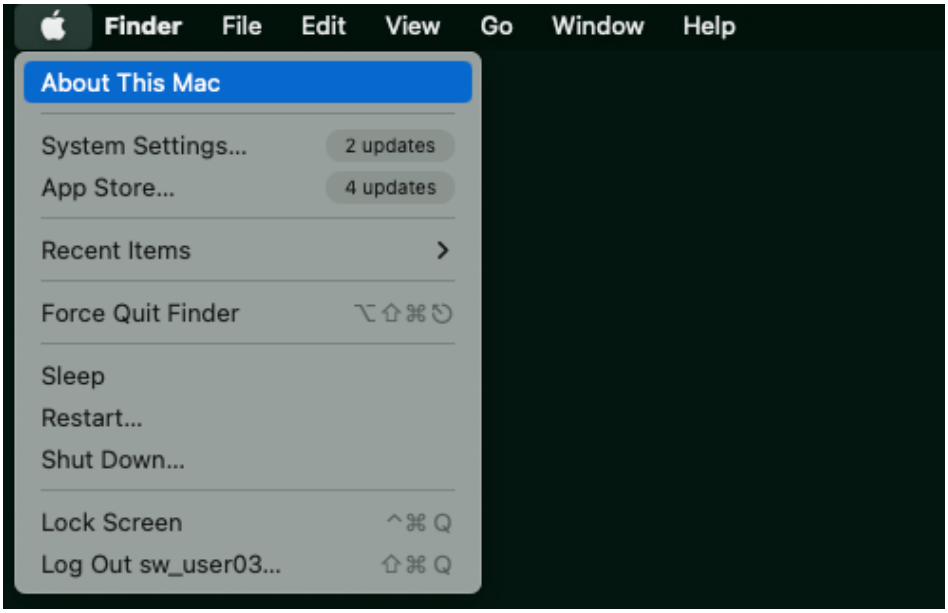

2. Check Chip or Processor

Apple Silicon	

Gainscha
Reliable and Innovative

Intel Processor	

3. Select a specific driver
   Apple Silicon: Select “gs_install_M1_1.0.pkg” Driver.



gs_install_M1_1.0.pkg

Intel Processor: Select “gs_install_1.0.pkg” Driver.




gs_install_1.0.pkg

Install Driver under Mac OS

1. Double click the gs_install_1.0.pkg.




2. Click the Continue button.

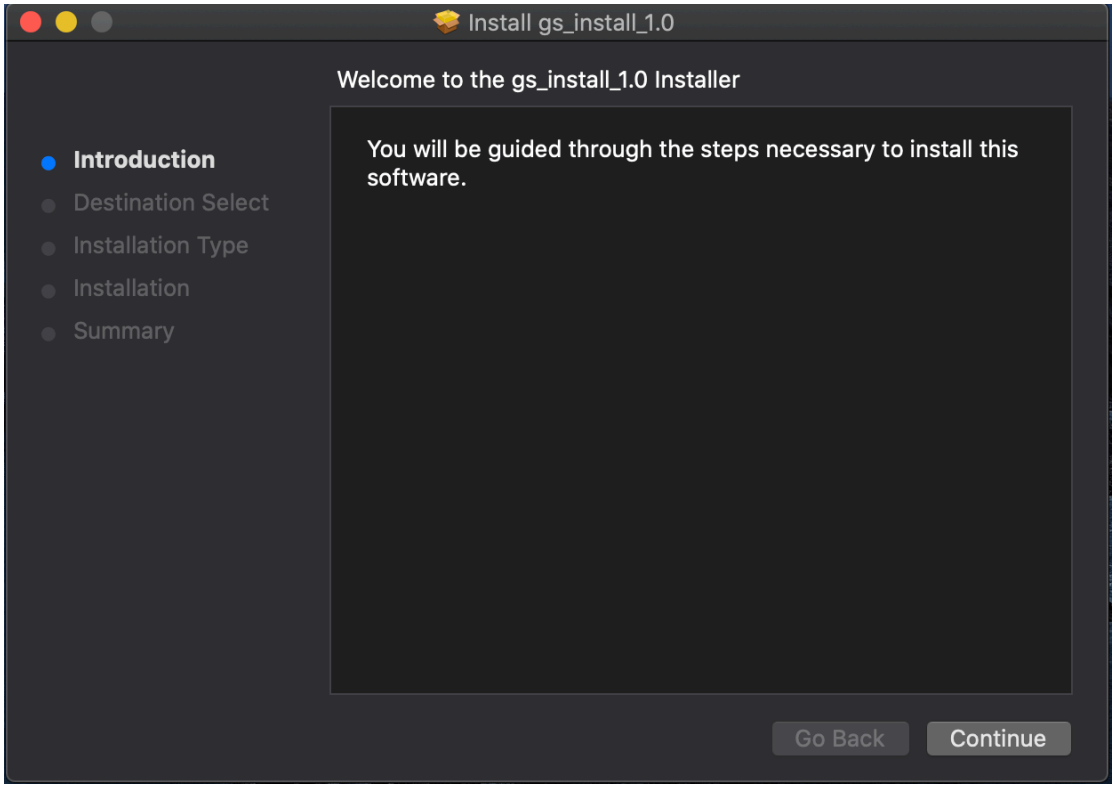


Gainscha
Reliable and Innovative


3. Click the Continue button.

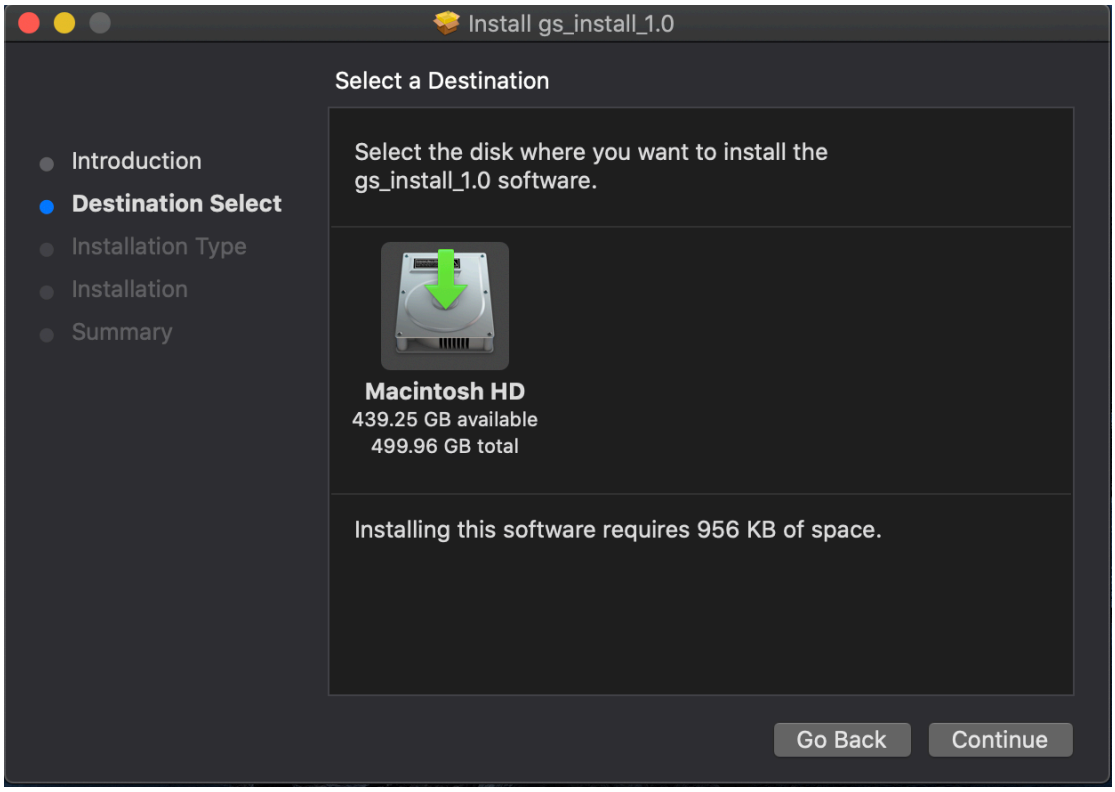


4. Use the default destination and click the Install button.

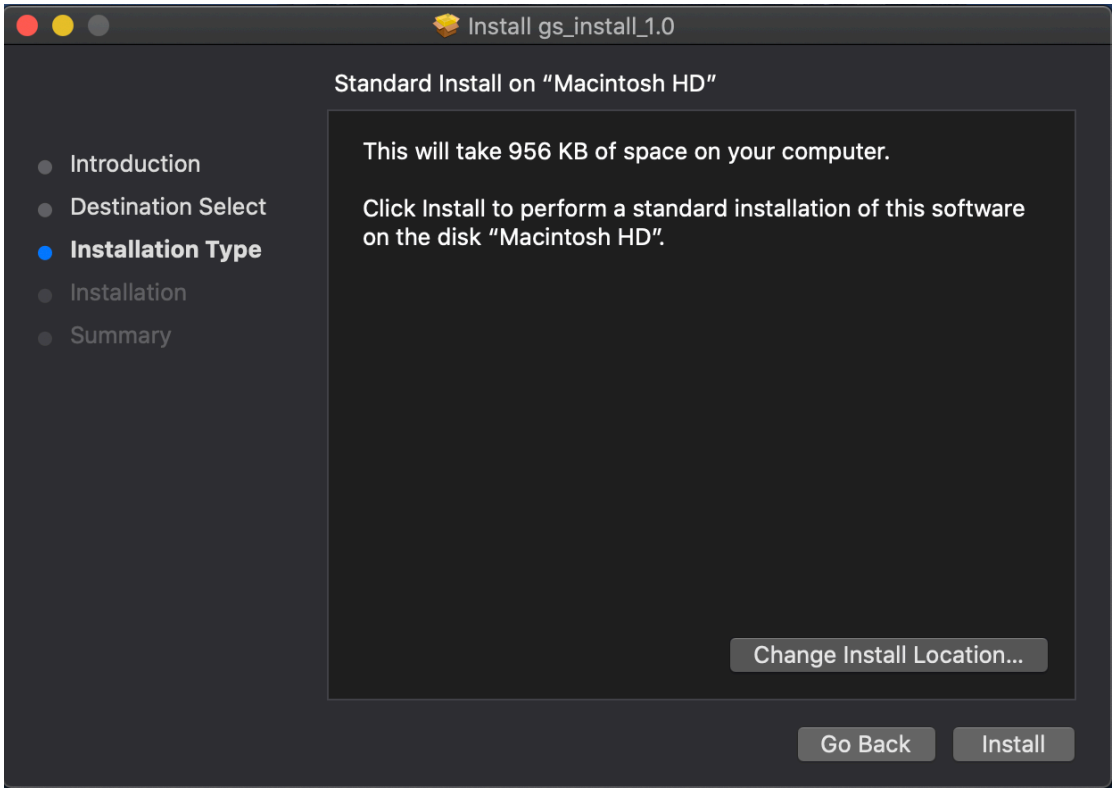

5. Input the User Name and Password, and click the Install Software button.

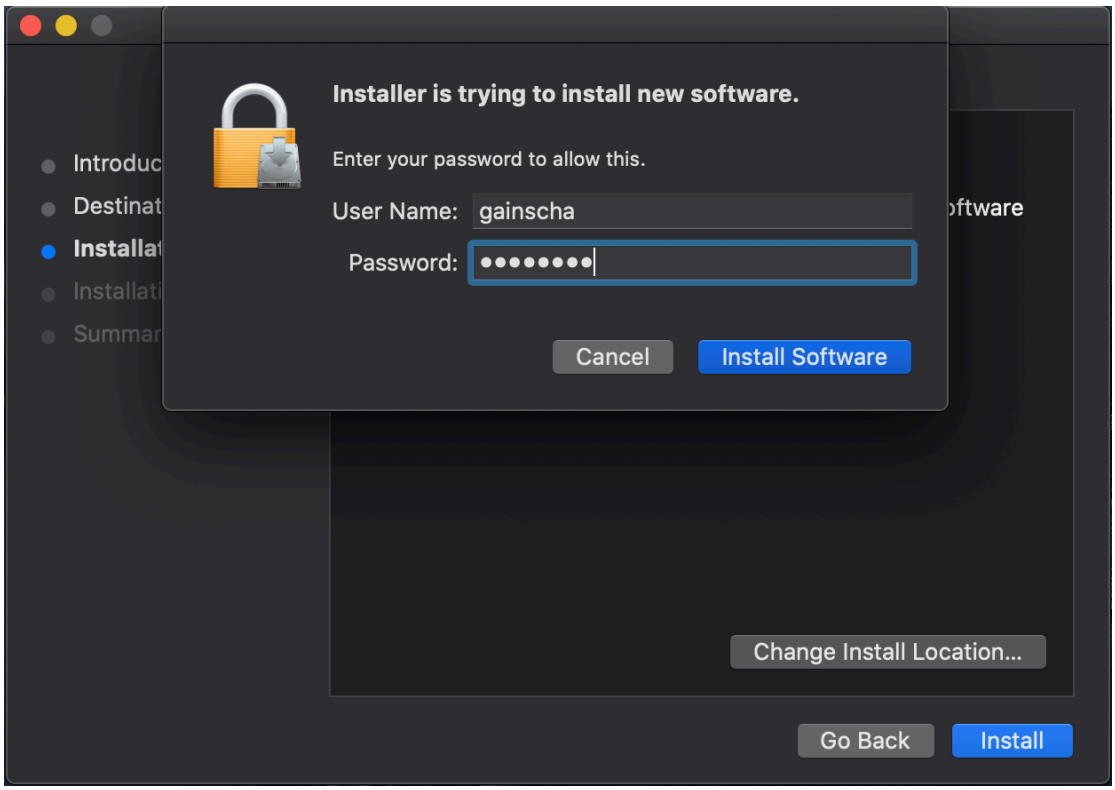


6. Finish installation.

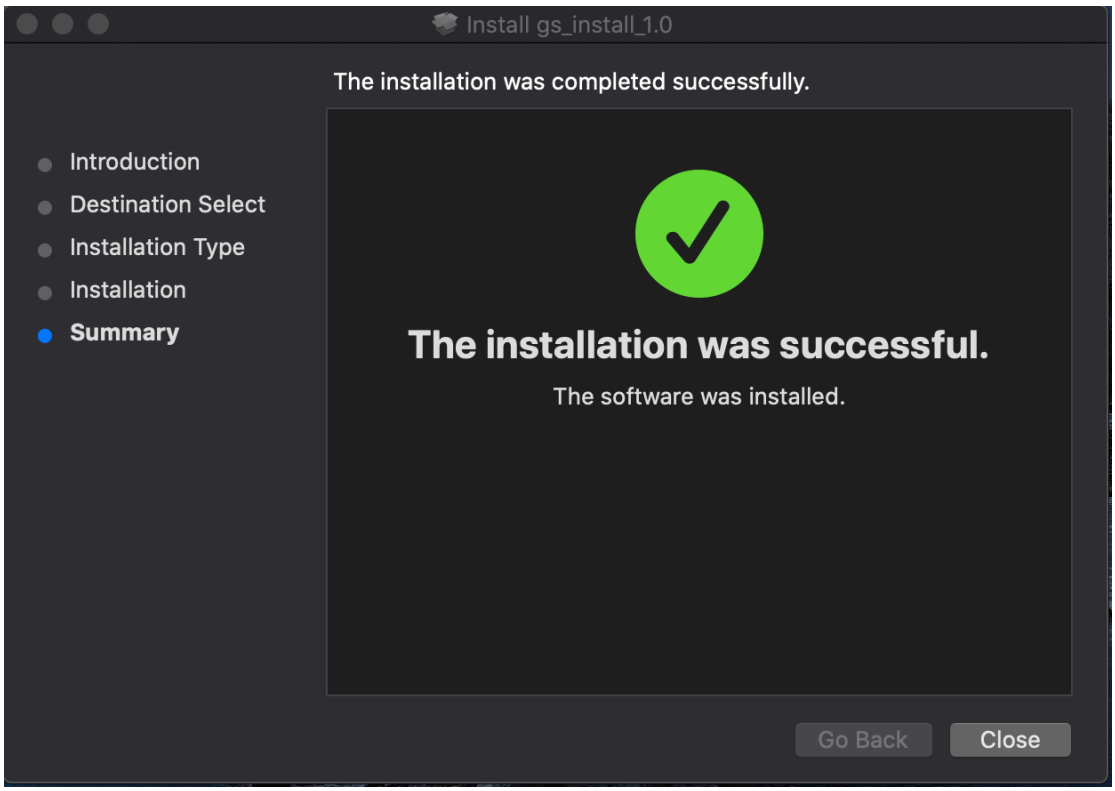

7. Click the System Preferences icon.




8. Click the Printer & Scanners icon.

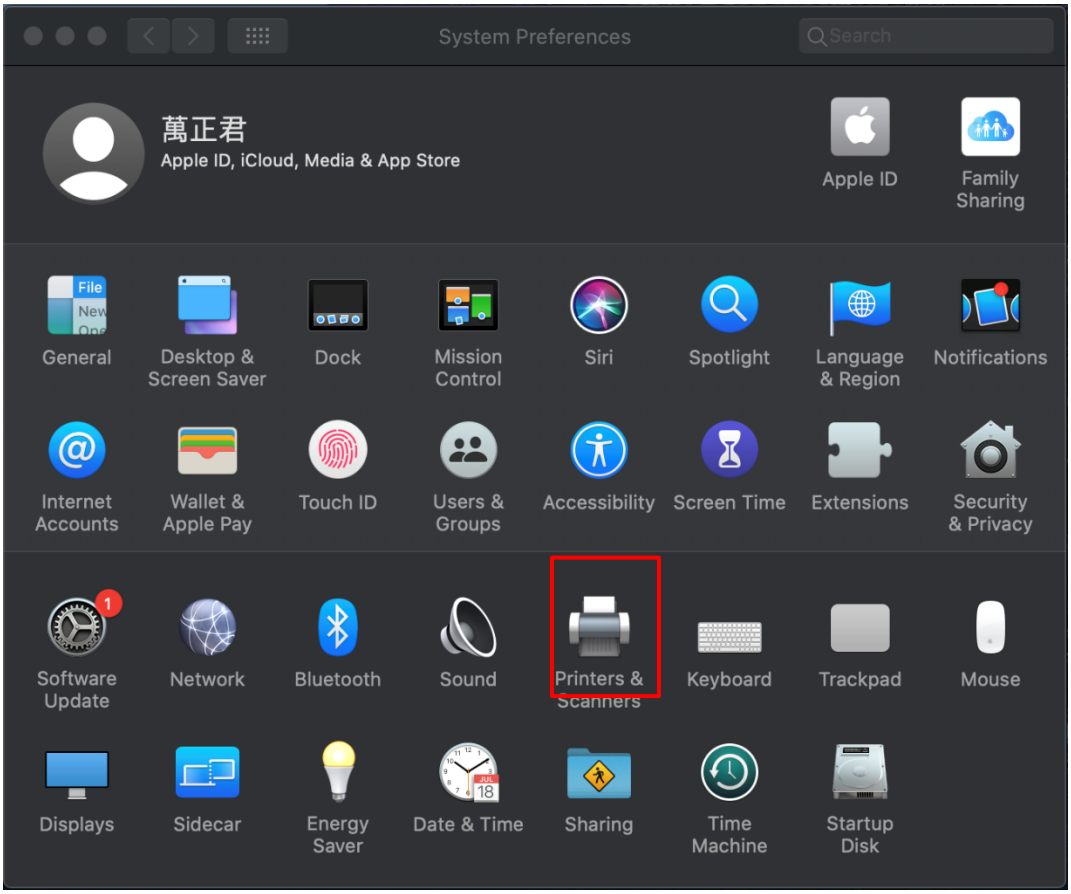


Gainscha
Reliable and Innovative


9. Click the Add (+) button to set up a printer.

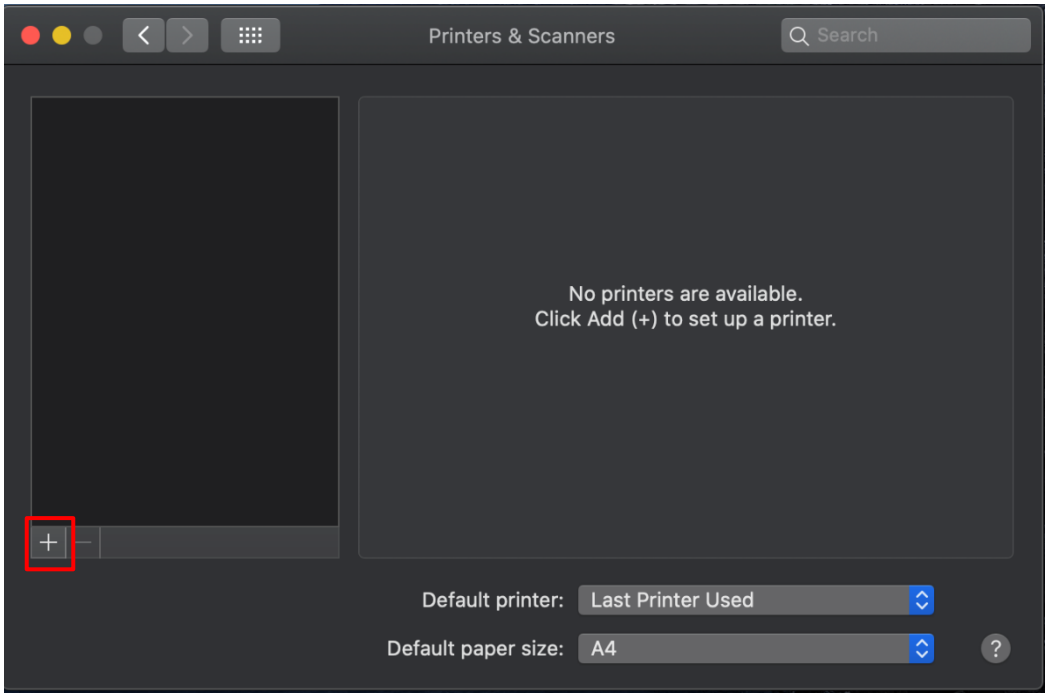


10. Connect the printer to MAC computer via USB. Select the printer model name. Select the “Other…” from the “Use” drop down list.

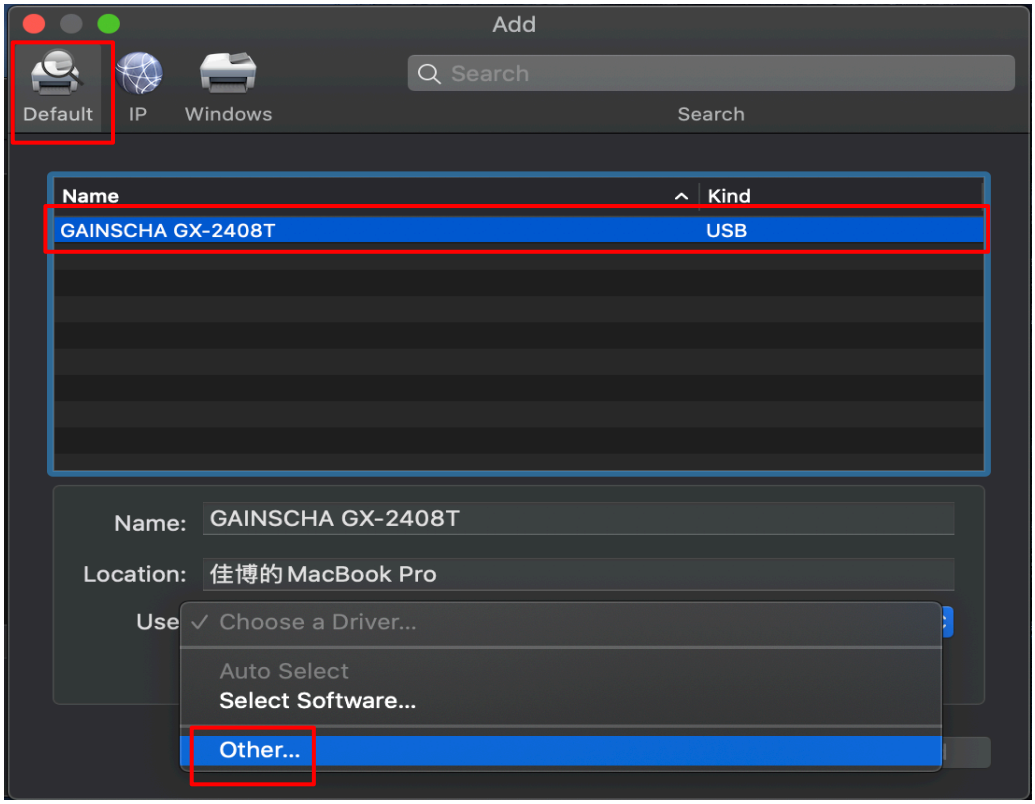


11. The printer driver file(.ppd) is in the PPD directory. Find the selected printer model in the folder. (Path: /Library/Printers/Gainscha/PPD)

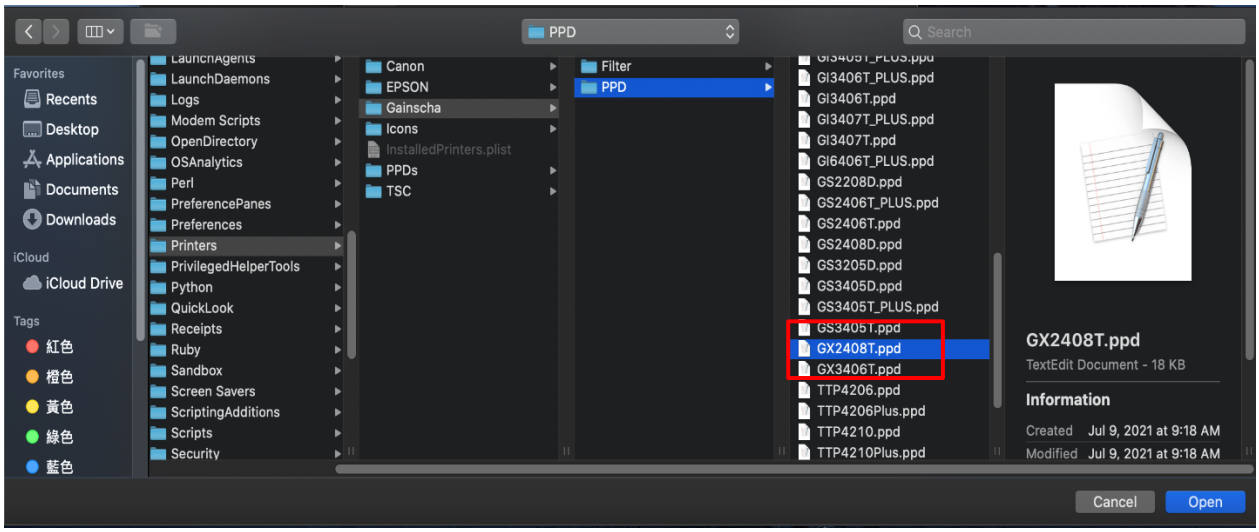

12. Click the Add button to install the MAC driver.

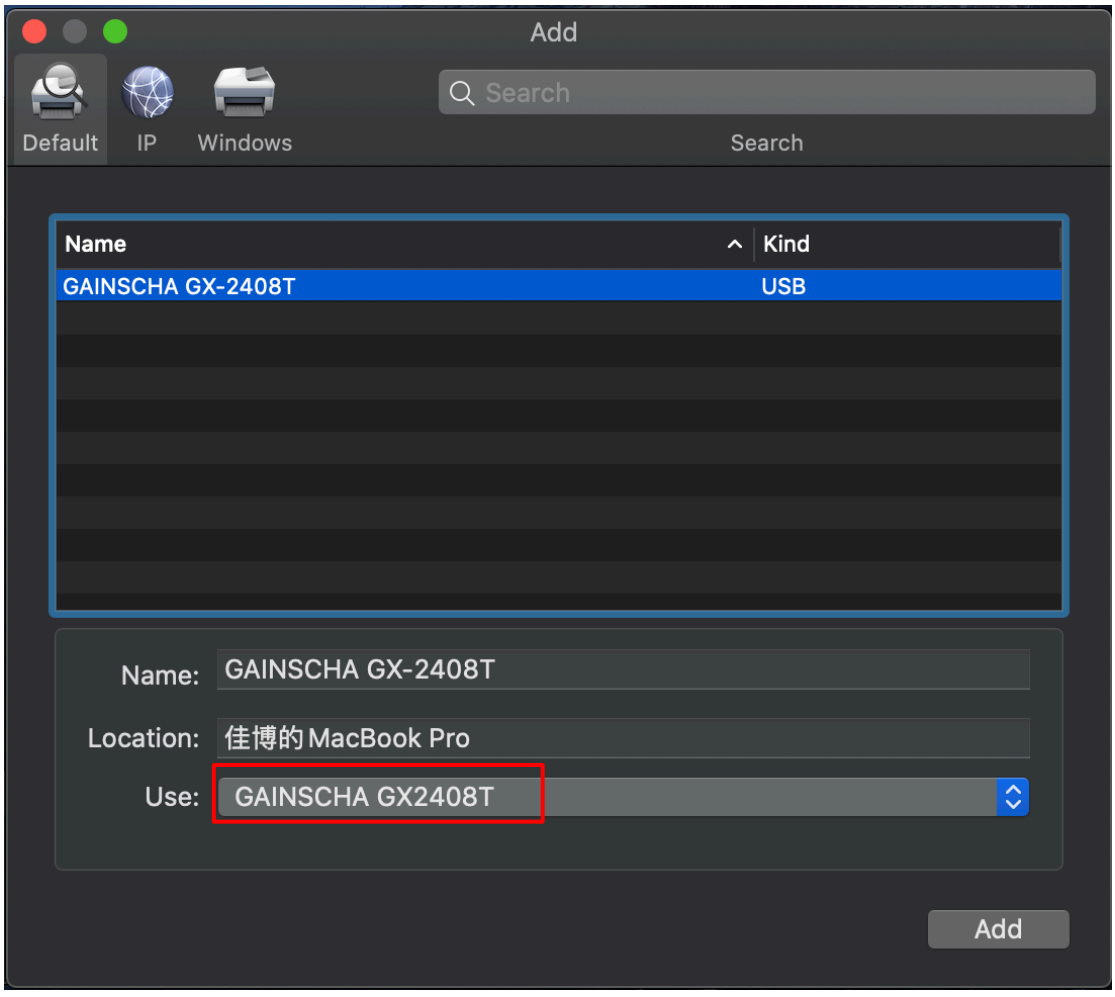

13. Done.

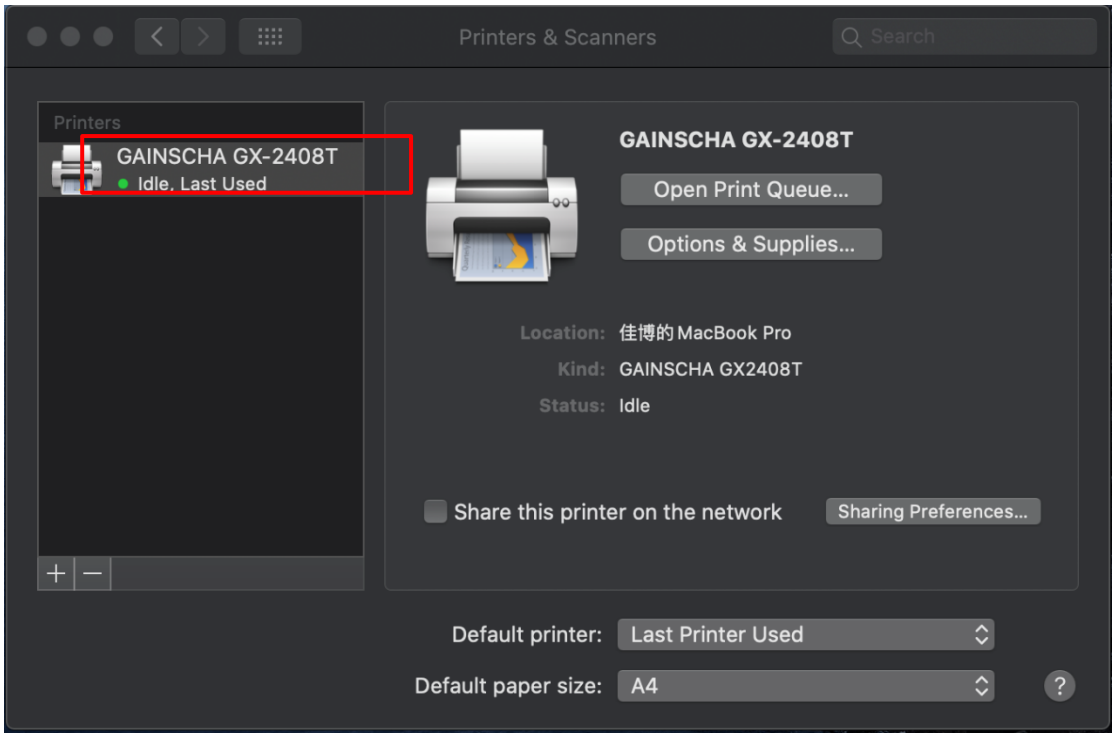
Printers & Scanners
Search
Printers
GAINSCHA GX-2408T
Idle, Last Used
GAINSCHA GX-2408T
Open Print Queue...
Options & Supplies...
Location: 佳博的 MacBook Pro
Kind: GAINSCHA GX2408T
Status: Idle
Share this printer on the network
Sharing Preferences...
Default printer: Last Printer Used
Default paper size: A4


Install Driver via CUPS (Web Interface)

1. Connect your printer to your computer and turn on the printer.

2. Open your browser and enter the URL http://localhost:631/




*If the message of Web Interface is Disabled is shown as the following, open the terminal and input the command : cupsctl WebInterface=yes to enable the web interface of CUPS.

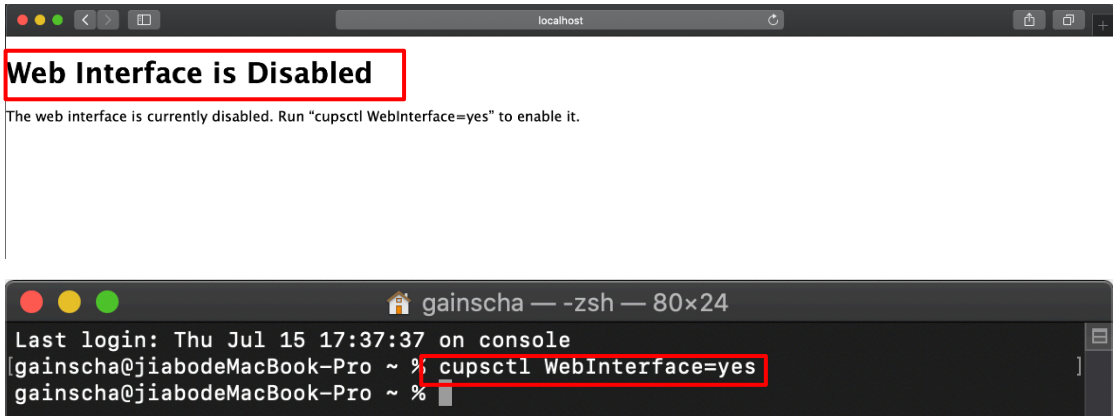


Gainscha
Reliable and Innovative


3. Now click on Administration then click on Add Printer.

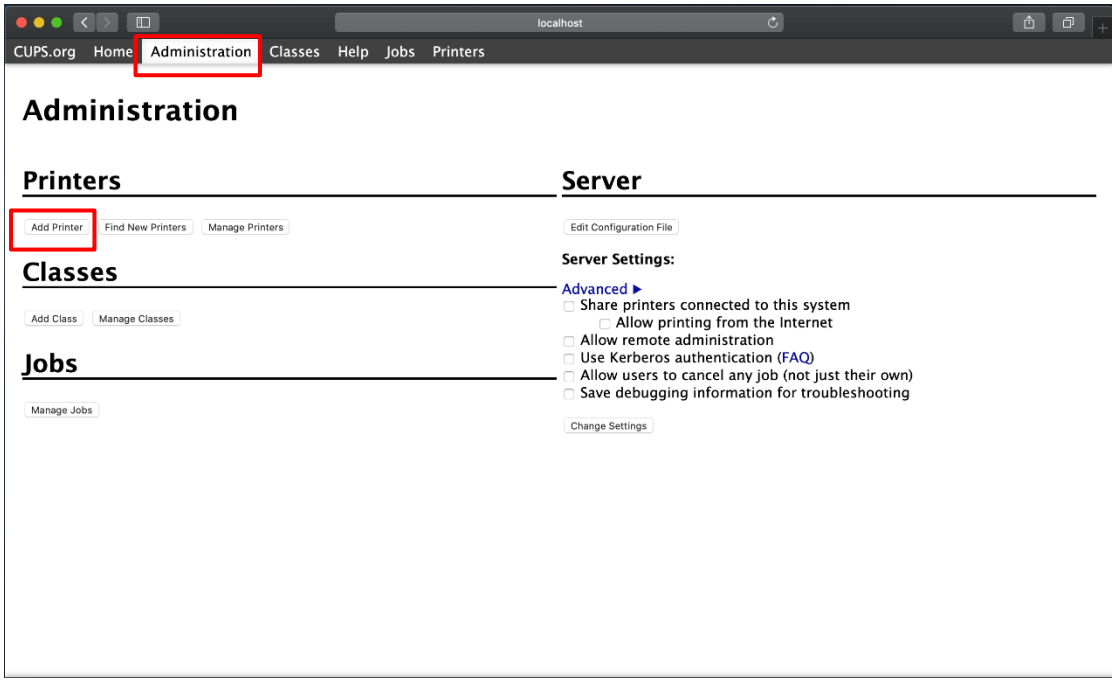


4. In the “Add Printer” page, choose the appropriate option.

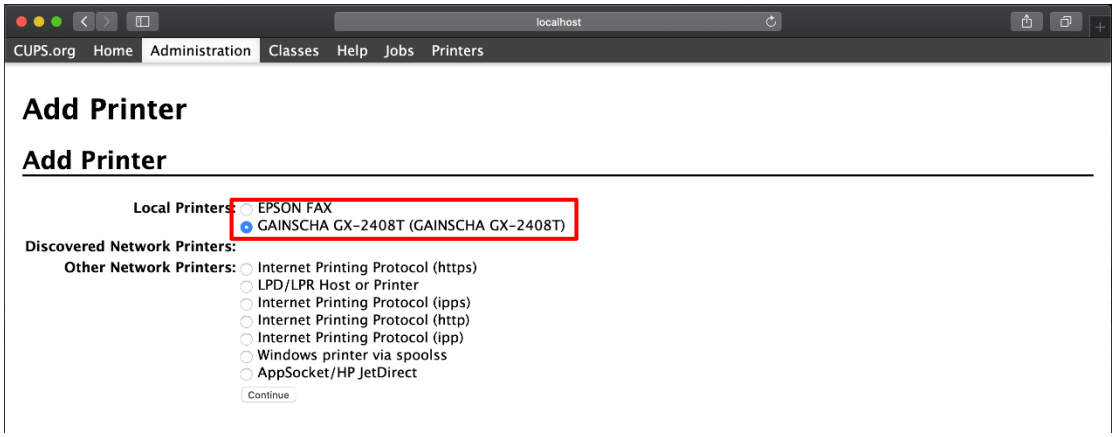


5. The Name and Description would be filled in automatically. Click “Continue”

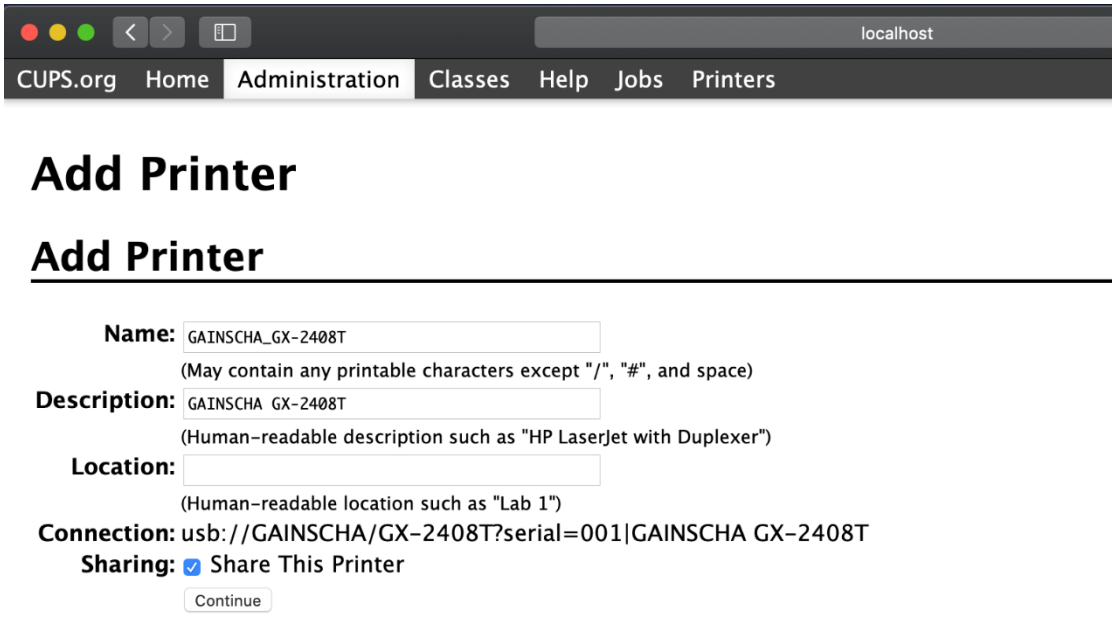


6. Click Add Printer and select the printer driver file(.ppd) which is in the PPD directory. (Path: /Library/Printers/Gainscha/PPD)

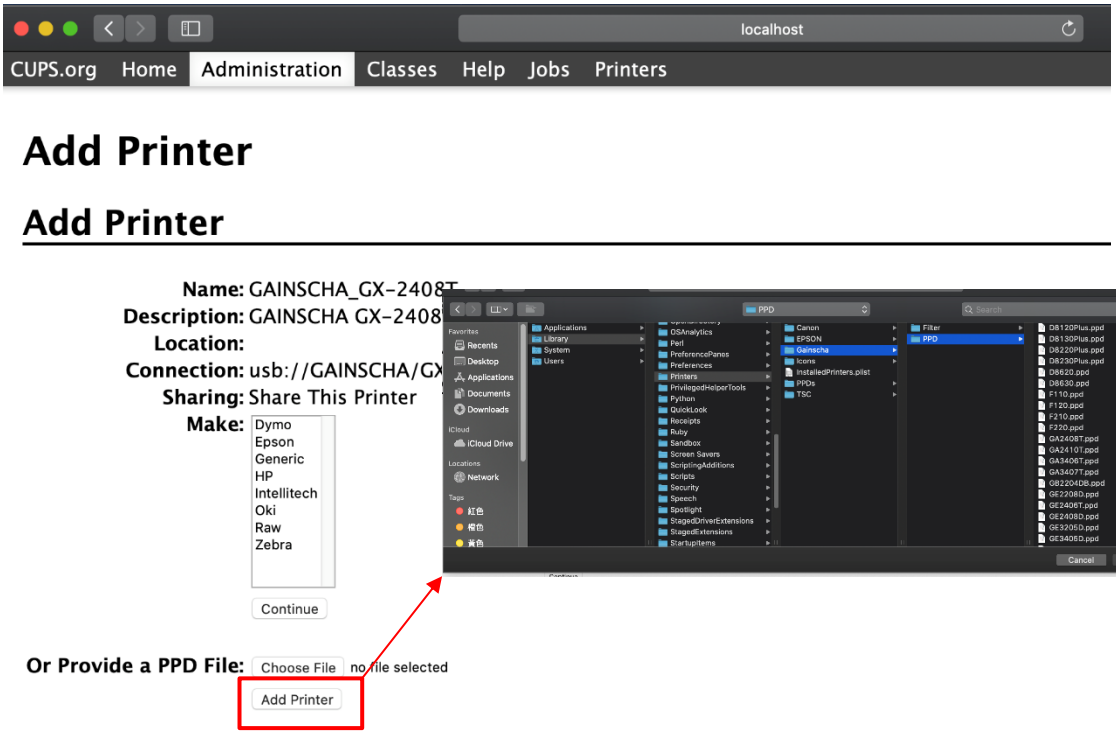

7. Install the printer successfully and you can start setting the printer.

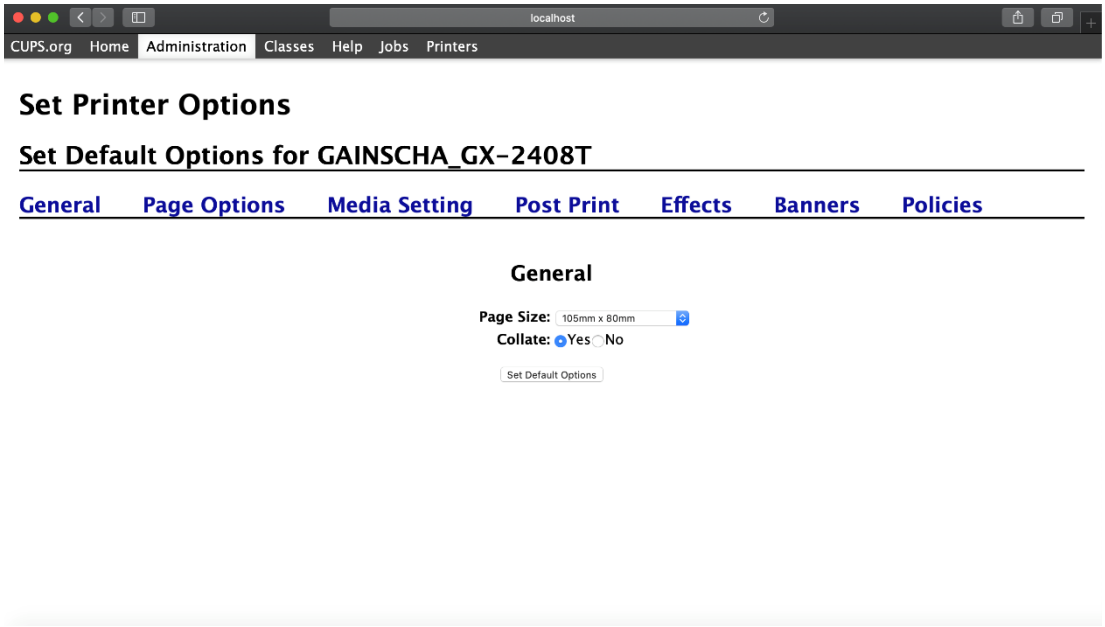


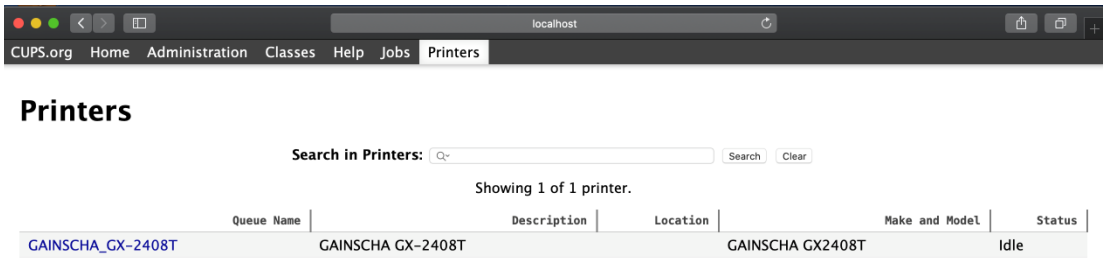


How to Define Default Printer Settings

❖ Setup printer settings

1. Double Click the file you want to print. (Here is an example for .bmp).

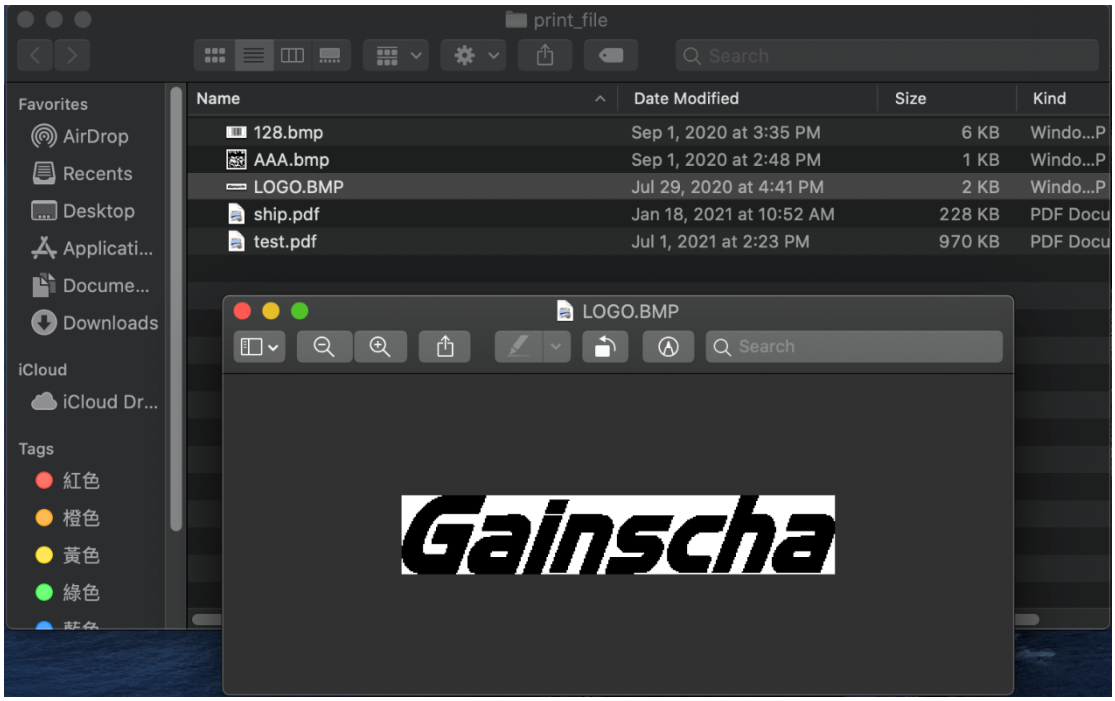


2. Select File then select Print.

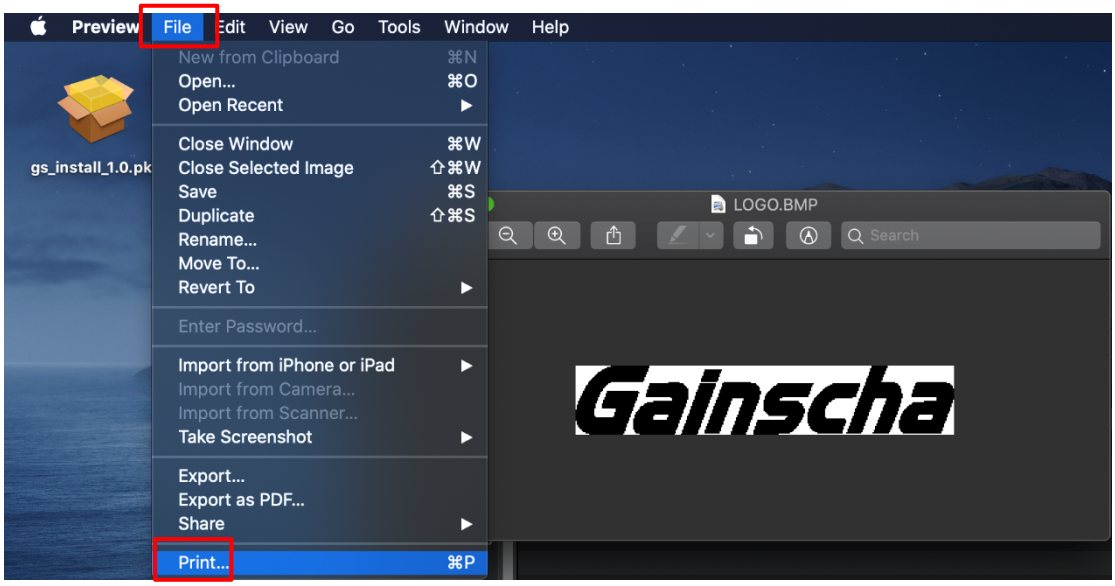


Gainscha
Reliable and Innovative


3. Show the printer setup dialog.

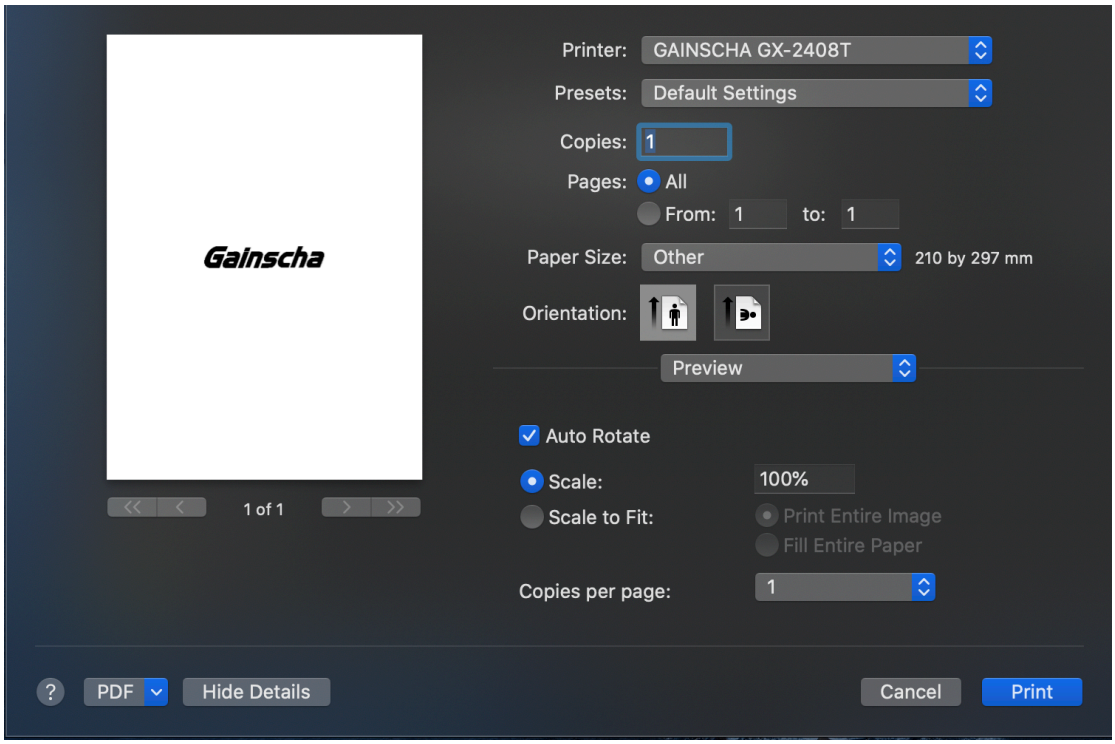


4. Change the Preview to the Printer Features from the drop-down menu.

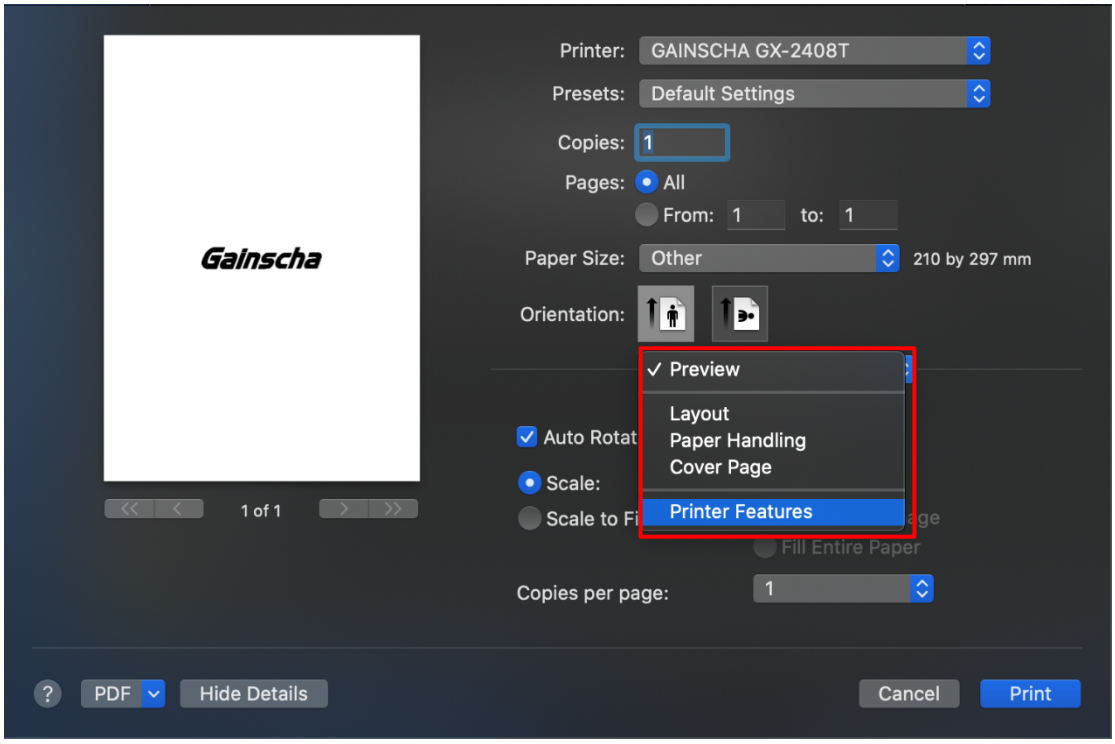


5. Set the Page Options settings.

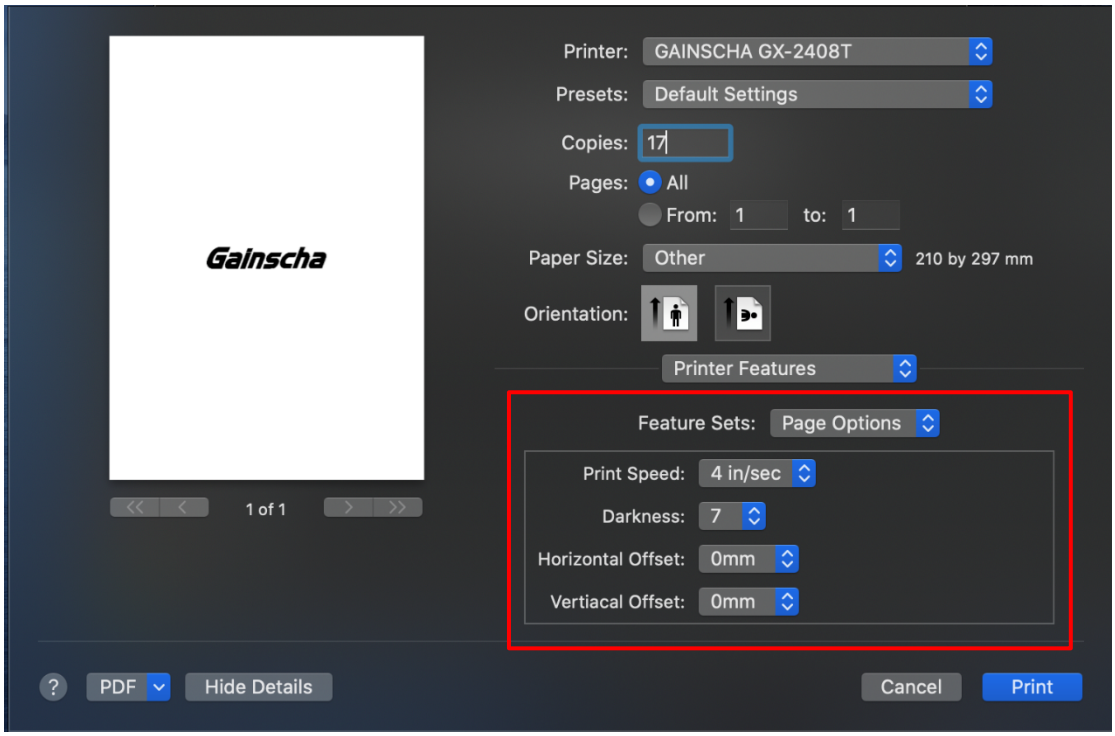


6. Set the Media Settings.

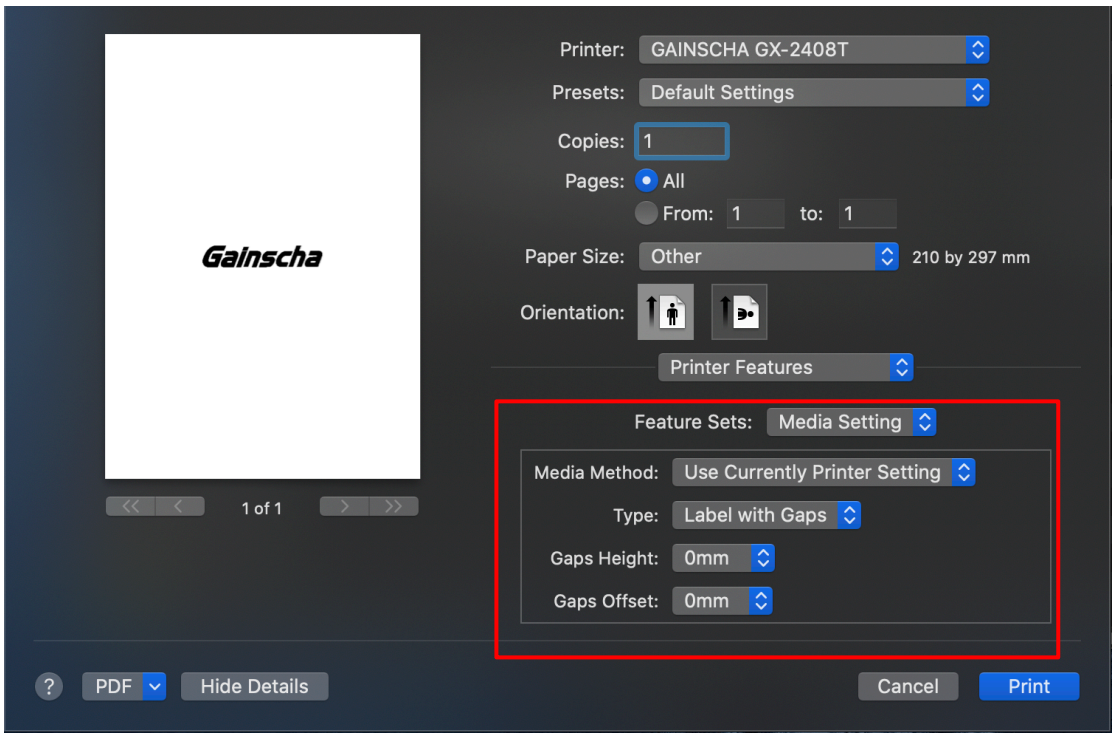

7. Set the Post Print Settings.

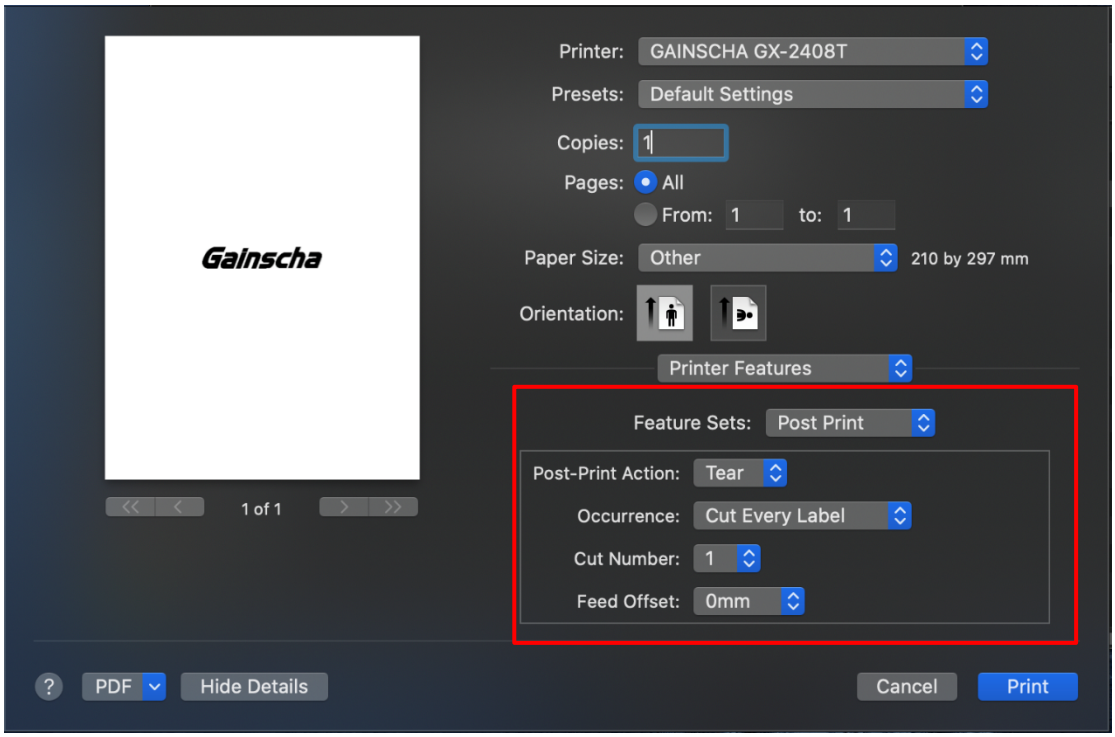


8. Select the proper Paper Size and Print.

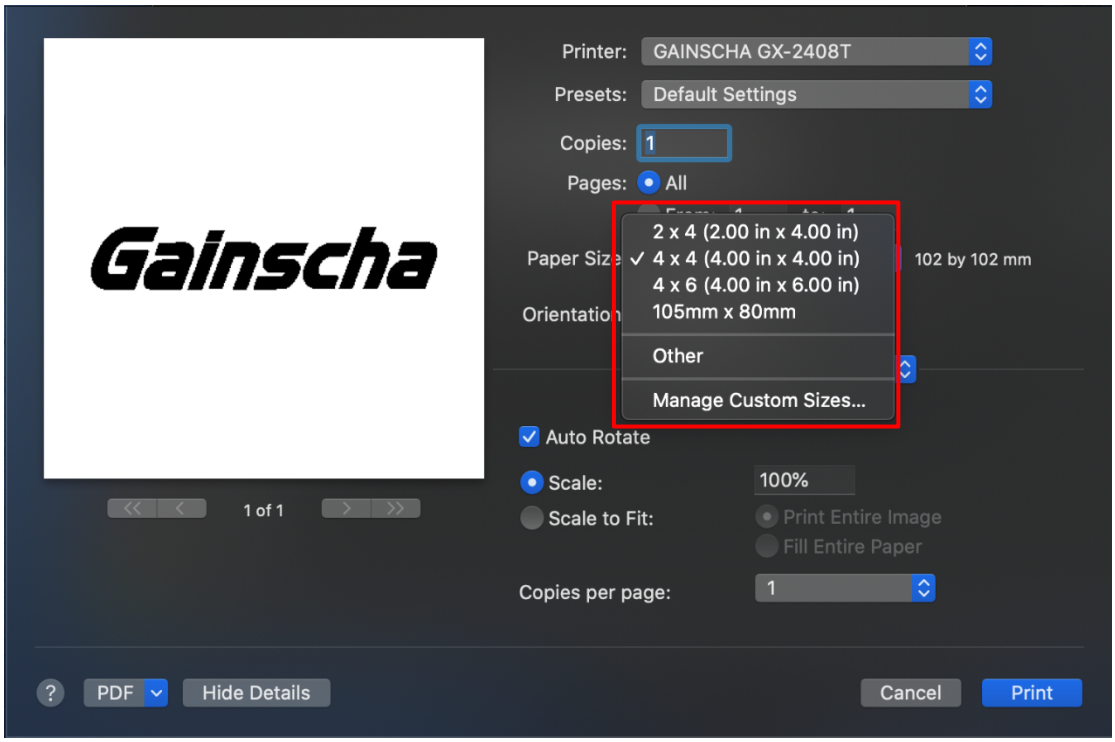


❖ Save and delete printer settings.


1. To save the settings, select the “Save Current Settings as Present…” from Presets drop down menu.

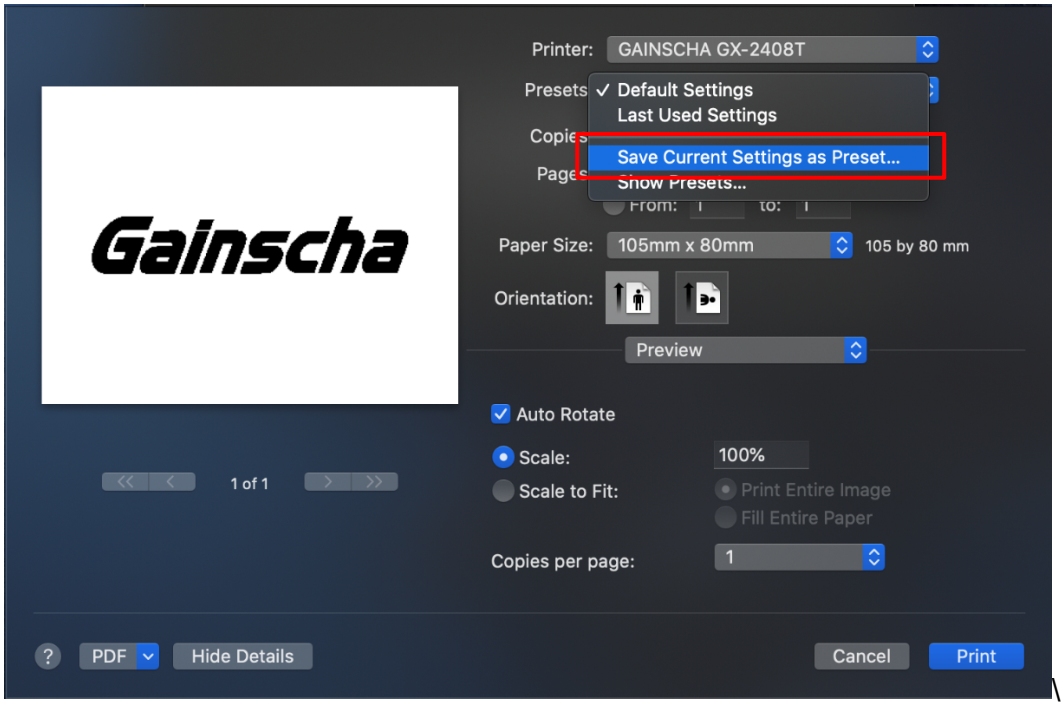

2. Input the Preset Name and set Preset Available for which printer. Click OK button to save settings.

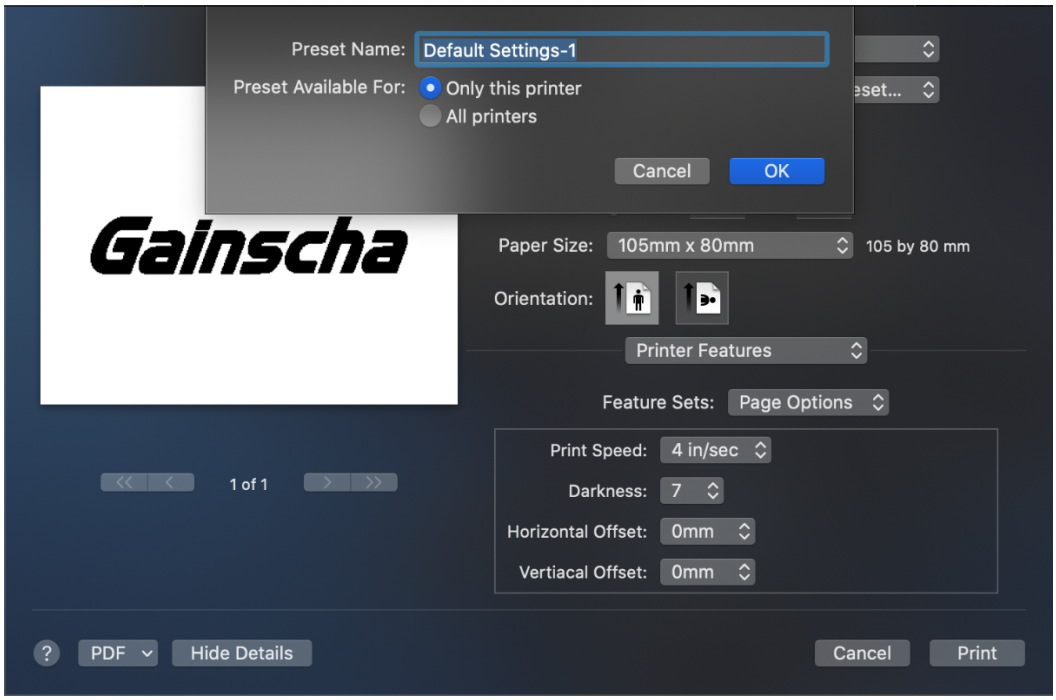

3. After saving the printer settings, the preset name is shown in the Presets list.

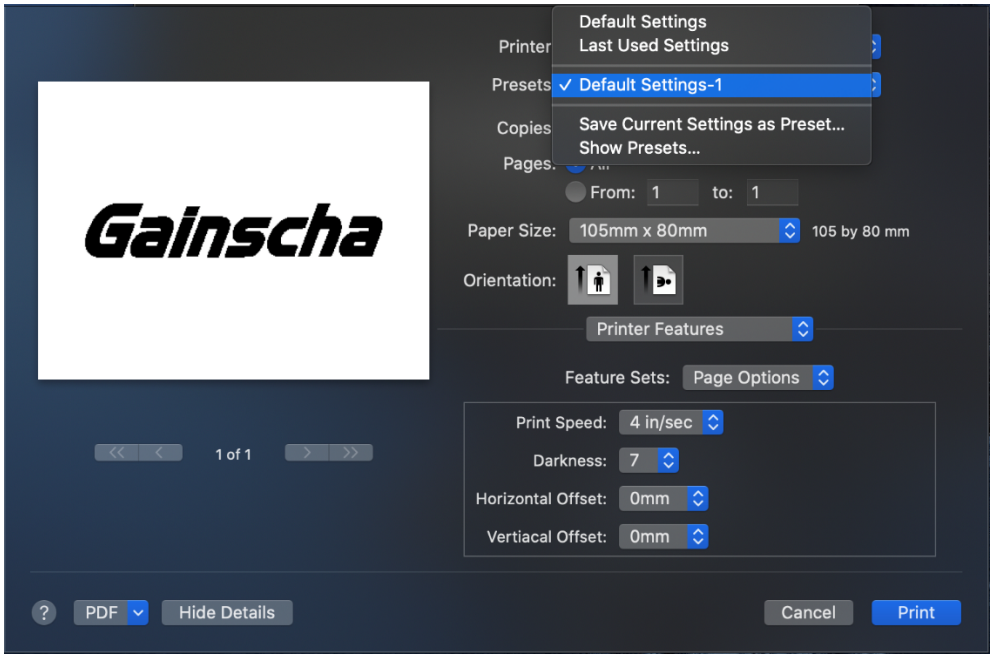

4. To delete the settings, select the Show Presets from the Presets drop down menu. In the Presets list as the following, select the settings which you want to delete and click OK button.

